


FACTORY FURNITURE

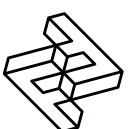

Scroll Picnic Set

OPERATION & MAINTENANCE MANUAL



Introduction

Design

Design, shop drawings and development by
Factory Furniture Ltd.

Manufacture

Factory Furniture manufactured components. Products are assembled in Factory workshops, checked and dispatched ready for installation. Replacement products or components thereof should be ordered direct from Factory Furniture Ltd.

Copyright

The design copyright for the product and drawing copyright remains the sole property of Factory Furniture Ltd.

General Specifications

Table

Metric length 2000mm | width 760mm | height 750mm*
Imperial length 6' 6½" | width 2' 6" | height 2' 5½"*

*Not including +300mm below ground level for sub-surface root fix

Approx Weight 106kg

Fixing Centres 1200mm (3' 11")

Bench

Metric length 2000mm | width 295mm | height 450mm*
Imperial length 6' 6½" | width 11½" | height 1' 5½"*

*Not including +300mm below ground level for sub surface root fix

Fixing Centres 1200mm (3' 11")

Approx Weight 44kg

Picnic Set (Combined)

Metric L 2000mm | width 1615mm | height 750mm*
Imperial length 6' 6½" | width 5' 3½" | height 2' 5½"*

* Not including +300mm below ground level for sub-surface root fix

Fixing Centres 1200mm (3' 11") x 1320mm (4' 4")

Approx Weight 194kg

Materials & Finishes

Table & Bench Slats

- Manufactured from FSC® certified hardwood
- Profiled and left untreated as standard (*oil or microporous woodstain treatment available on request*)
- Supported on and bolted to leg



Legs

- Manufactured from stainless steel - satin polished
- Stainless steel plate at top of each base for fixing to table / bench top
- Stainless steel 'T' bar at foot of each base for better anchorage in foundation pad
- Root fixed 300mm (1') below ground level

General Maintenance

(Recommended Schedule & Guidelines)

Daily/Weekly/Monthly (or as adopted)

Visual checks of timber table/bench slats and frame - check all items for superficial or physical damage.

Three Monthly

Clean all items as detailed below check all fixings are seated correctly; inspect timber for serious damage and splinters.

Six Monthly

Secure all fixings; full clean as detailed below; check that table and benches are firmly secured to the ground

Specific Maintenance Details


FSC Timber

Clean with a stiff brush once per year, especially in more exposed locations, in order to prevent a verdigris type build up on the timber surface. Ideally this should be completed in early spring. During the cleaning stage, all exposed timber surfaces should be inspected for splits and splinters. Any splinters and graffiti should be removed and the surface sanded with 100 grit sandpaper in order to remove any uneven / sharp edges or surfaces.

During the first few months after installation the tannin naturally occurring in the timber may leach out and cause a brown staining on the bases. This may be removed with a light solution of household bleach and water.

Stainless Steel (polished stainless steel only)

Clean as required, but at least every three months, using a stainless steel polish and a lint free cloth. To remove ground in dirt, a stainless steel finishing pad may be required.

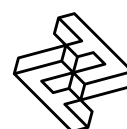

Repairs

FSC Timber


For light damage, please see section on specific maintenance details above. For instances of heavy damage, the timber item should be replaced. Please order against the part number reference in the reordering section towards the end of this manual.


Stainless Steel

Light damage (surface scratches etc.) can be removed using an emery pad (240 grit) and freeing oil such as 'WD40'. Care should be taken to follow the direction of the brushing grain. It is recommended that a trial repair be carried out on an unimportant surface first. No corrosive cleaners or other abrasives should be used. Any contamination, particularly carbon steel scuffs from vehicles, should be quickly removed to avoid corrosion.

Heavy Damage

In the event of serious damage to any component, replacements should be ordered from Factory Furniture Ltd. In this event (or if the product needs to be disassembled for any reason), please contact Factory Furniture for detailed technical advice.

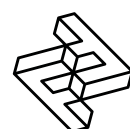

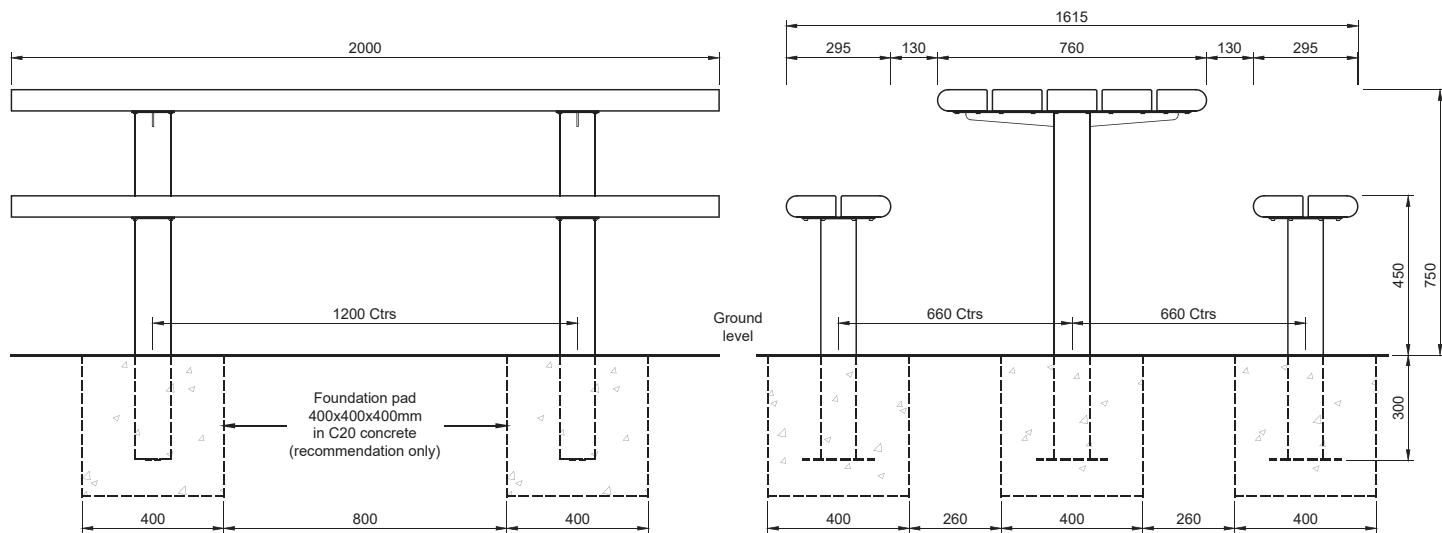

Scroll Picnic Set

Installation Instructions

All installation works to be carried out by competent personnel - install as complete unit.

Scroll Picnic Set

1. Dig holes for foundation pads (see illustration) and position table and benches in holes in correct orientation with bases central in each hole. For correct heights table and bench legs should sit 300mm below finished ground level (table 750mm & bench 450mm above FGL)
2. Carefully pour concrete for each pad. Check table and benches are level and maintain at correct height and vertical until concrete sets (at least 24 hours).

IMPORTANT NOTE

Ensure that stainless steel is protected during site cutting of stone – contamination from disc cutters will produce corrosion on stainless steel components.

5 Pioneer Road, Faringdon,
Oxfordshire SN7 7BU
+44 (0)1367 242731
hello@factoryfurniture.co.uk

factoryfurniture.co.uk

