

FACTORY FURNITURE



QUAY Seat

Introduction

Design

Design, shop drawings and development by Factory Furniture Ltd

Manufacture

Factory Furniture manufactured components. Products are assembled in Factory workshops, checked and dispatched ready for installation. Replacement products or components should be ordered direct from Factory Furniture Ltd.

Copyright

The design copyright for the product and drawing copyright remains the sole property of Factory Furniture Ltd.

Timber

All timber used in Factory Furniture products is FSC® certified



Contents

Spec Sheet

QUAY Seat (2m) ... 3

QUAY Seat & Arms (2m) ... 4

QUAY Seat (3m) ... 5

QUAY Seat & Arms (3m) ... 6


Detailed Materials & Maintenance ... 7

Installation Instructions

QUAY Seat (2m) ... 8

QUAY Seat (3m) ... 9

NBS Specifications ... 10

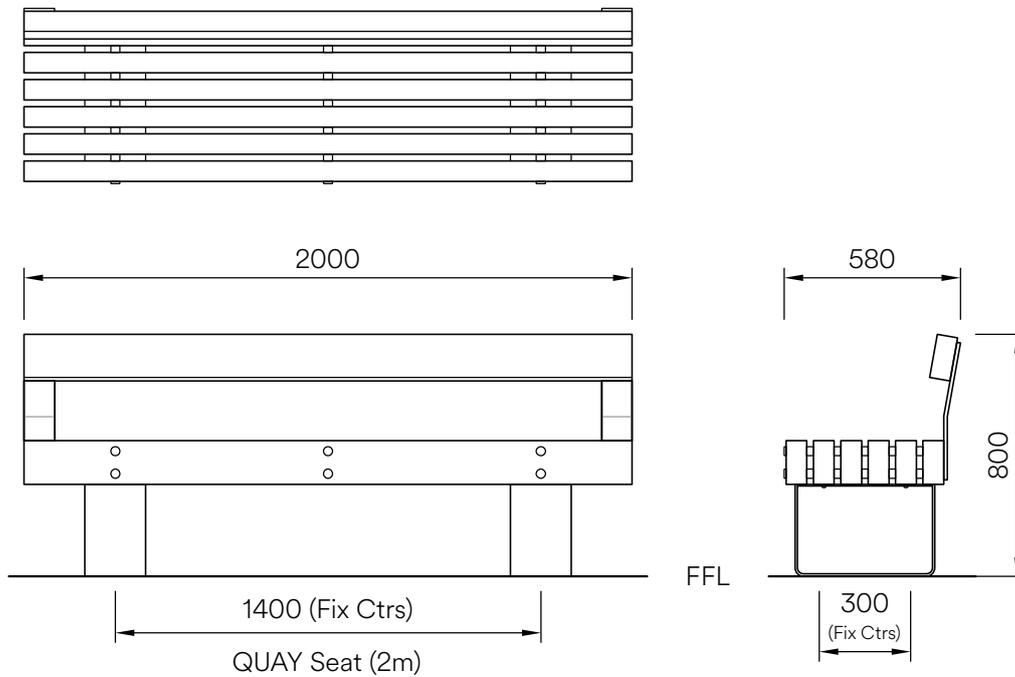

Composition

Slats - FSC® certified softwood

Frame - Mild steel

Finishes

Timber - Tanalised sanded finish as standard

Mild steel - Hot-dip galvanised (polyester powder-coated finish available (colour as per client's specification))

Dimensions

Metric L 2000mm | width 580mm | height 800mm

Imperial L 6' 6½" | width 1' 11" | height 2' 7½"

Approx weight

119kg

Fixing centres & method

1400mm (4' 7") x 300mm (12") - 4 off Resin stud anchors per base

Foundation

2 no. pad 400 x 600 x 400 mm in C20 concrete (recommendation only)


Handling

Please observe health & safety lifting guidelines. A forklift or crane will be required for off-loading and positioning of this product.

Maintenance

Depends on usage and position. All elements will require cleaning annually. Galvanised and powder coated mild steel only require maintenance if damaged.

*Please note that when a powder-coat is applied over a hot dip galvanised surface pinholing can occur in the surface finish - this is not considered a defect.

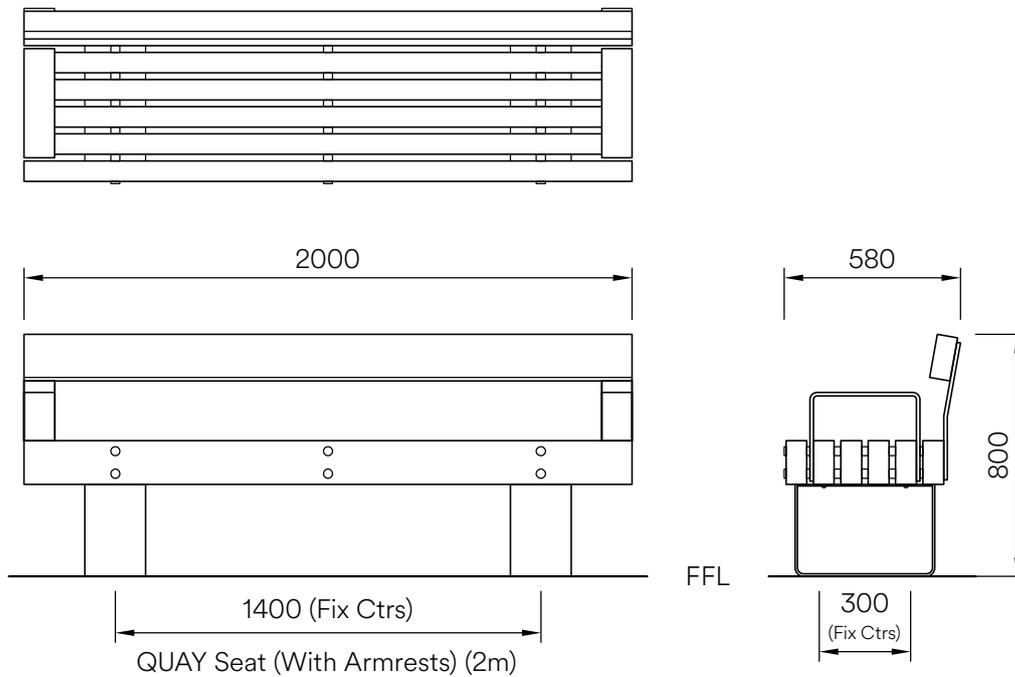

Composition

Slats - FSC® certified softwood

Frame - Mild steel

Finishes

Timber - Tanalised sanded finish as standard

Mild steel - Hot-dip galvanised (polyester powder-coated finish available (colour as per client's specification))

Dimensions

Metric L 2000mm | width 580mm | height 800mm

Imperial L 6' 6½" | width 1' 11" | height 2' 7½"

Approx weight

136kg

Fixing centres & method

1400mm (4' 7") x 300mm (12") - 4 off Resin stud anchors per base

Foundation

2 no. pads 400 x 600 x 400 mm in C20 concrete (recommendation only)


Handling

Please observe health & safety lifting guidelines. A forklift or crane will be required for off-loading and positioning of this product.

Maintenance

Depends on usage and position. All elements will require cleaning annually. Galvanised and powder coated mild steel only require maintenance if damaged.

*Please note that when a powder-coat is applied over a hot dip galvanised surface pinholing can occur in the surface finish - this is not considered a defect.

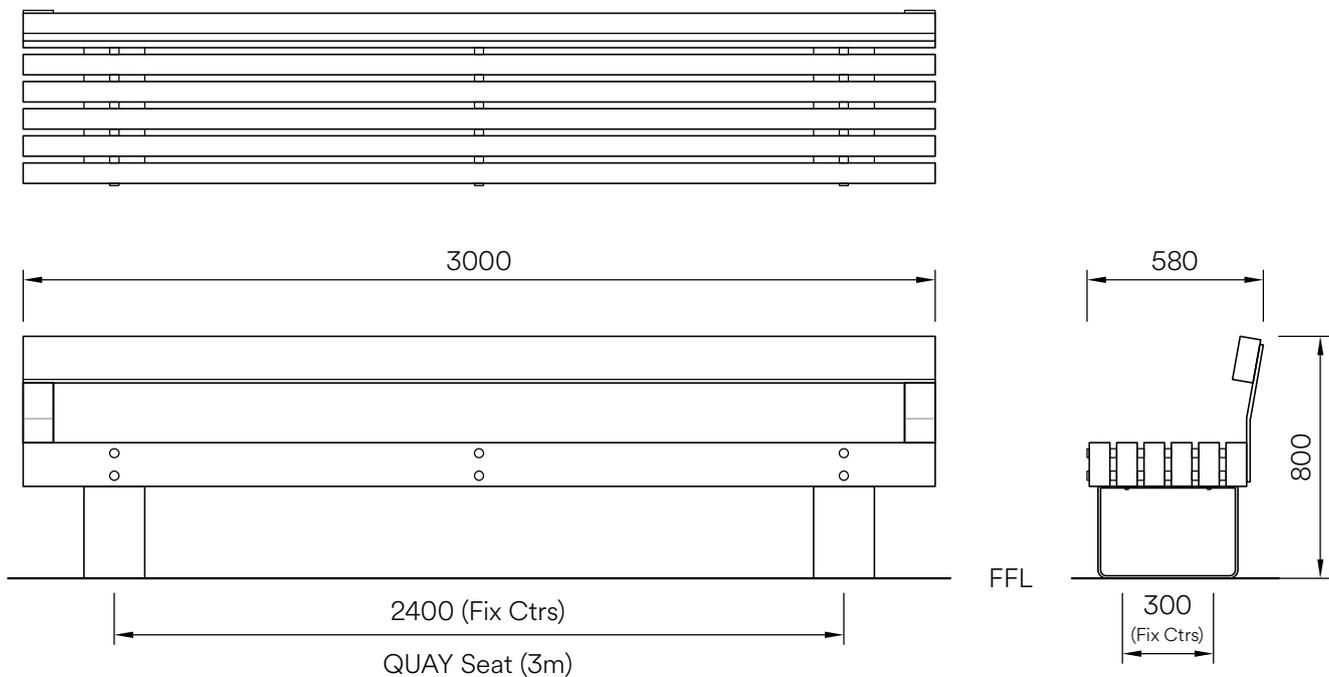

Composition

Slats - FSC® certified softwood

Frame - Mild steel

Finishes

Timber - Tanalised sanded finish as standard

Mild steel - Hot-dip galvanised (polyester powder-coated finish available (colour as per client's specification))

Dimensions

Metric L 3000mm | width 580mm | height 800mm

Imperial L 9' 10" | width 1' 11" | height 2' 7½"

Approx weight

154kg

Fixing centres & method

2400mm (7' 10½") x 300mm (12") - 4 off Resin stud anchors per base

Foundation

2 no. pads 400 x 600 x 400 mm in C20 concrete (recommendation only)


Handling

Please observe health & safety lifting guidelines. A forklift or crane will be required for off-loading and positioning of this product.

Maintenance

Depends on usage and position. All elements will require cleaning annually. Galvanised and powder coated mild steel only require maintenance if damaged.

*Please note that when a powder-coat is applied over a hot dip galvanised surface pinholing can occur in the surface finish - this is not considered a defect.

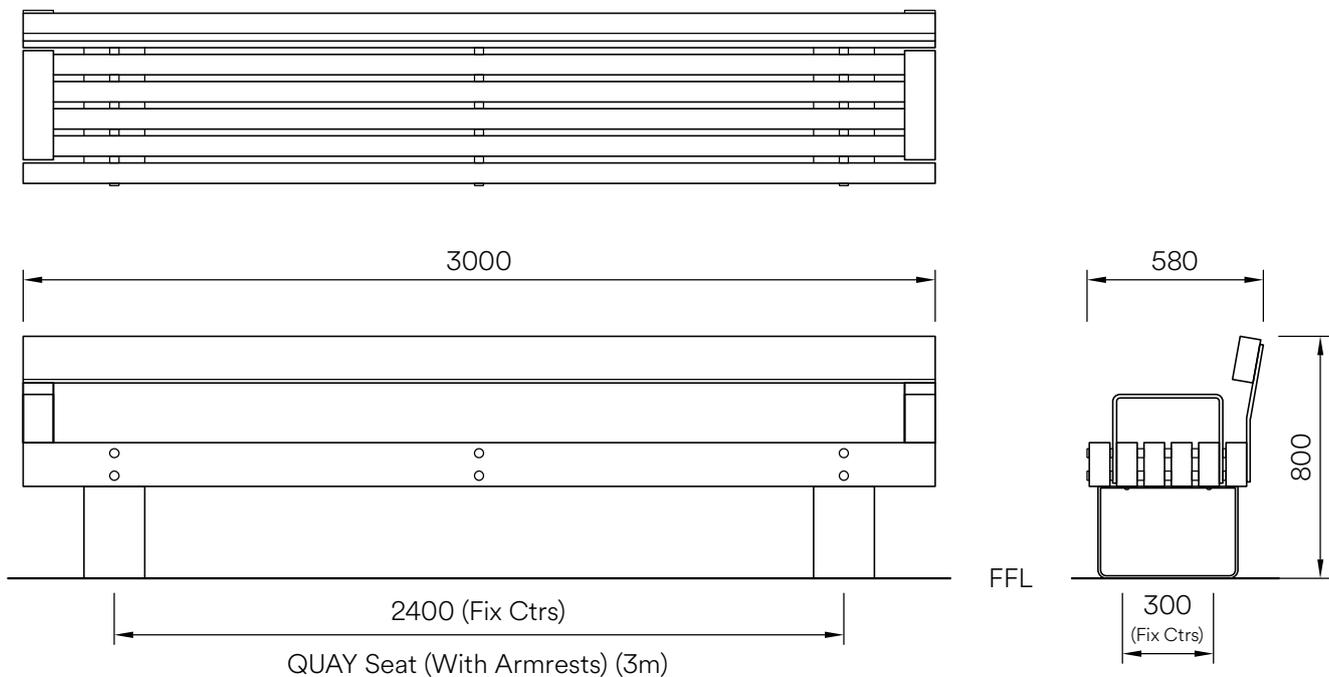

Composition

Slats - FSC® certified softwood

Frame - Mild steel

Finishes

Timber - Tanalised sanded finish as standard

Mild steel - Hot-dip galvanised (polyester powder-coated finish available (colour as per client's specification))

Dimensions

Metric L 3000mm | width 580mm | height 800mm

Imperial L 9' 10" | width 1' 11" | height 2' 7½"

Approx weight

171kg

Fixing centres & method

2400mm (7' 10½") x 300mm (12") - 4 off Resin stud anchors per base

Foundation

2 no. pads 400 x 600 x 400 mm in C20 concrete (recommendation only)

Handling

Please observe health & safety lifting guidelines. A forklift or crane will be required for off-loading and positioning of this product.

Maintenance

Depends on usage and position. All elements will require cleaning annually. Galvanised and powder coated mild steel only require maintenance if damaged.

*Please note that when a powder-coat is applied over a hot dip galvanised surface pinholing can occur in the surface finish - this is not considered a defect.

Detailed Material & Finish Specifications

Seat Slat Assembly

- Seat slats are manufactured from FSC® certified softwood and are profiled with a sanded finish - tanned as standard.
- Spacers & end caps in aluminum (stainless steel available on request) concealing zinc-coated mild steel threaded tie rods tying slats together.
- Seat slats supported on 2 no. bases attached to seat top

Backrest Slat Assembly

- Backrest slat is manufactured from FSC® certified softwood and are profiled with a sanded finish - tanned as standard.
- Backrest brackets are manufactured from mild steel with an all welded construction and hot-dip galvanised finish as standard (polyester powder coated finish available (colour as per customer specification)).
- Backrest slat is bolted to 2 no. brackets which are bolted to seat slat assembly
- Armrest (where supplied) are manufactured from mild steel with an all welded construction and hot-dip galvanised finish as standard (polyester powder coated finish available (colour as per customer specification)).

Bases

- Manufactured from mild steel with an all welded construction and hot-dip galvanised finish as standard (polyester powder coated finish available (colour as per customer specification)).
- Seat anchored to ground through bases using 4 no. M10 resin anchors total.

General Maintenance (Recommended Schedule & Guidelines)

Daily/Weekly/Monthly (or as adopted)

Visual checks of seat slats and frame - check all items for superficial or physical damage.

Three Monthly

Clean all items as detailed below check all fixings are seated correctly; inspect timber for serious damage and splinters.

Six Monthly

Secure all fixings; full clean as detailed below; check that seat is firmly secured to the ground

Specific Maintenance Details

FSC Timber

Clean with a stiff brush once per year, especially in more exposed locations, in order to prevent a verdigris type build up on the timber surface. Ideally this should be completed in early spring. During the cleaning stage, all exposed timber surfaces should be inspected for splits and splinters. Any splinters and graffiti should be removed and the surface sanded with 100 grit sandpaper in order to remove any uneven / sharp edges or surfaces.

During the first few months after installation the tannin naturally occurring in the timber may leach out and cause a brown staining on the bases. This may be removed with a light solution of household bleach and water.

Galvanised & Polyester Powder Coated

For general cleaning using a damp cloth and warm soapy water only. Scourers and abrasive cleaners are NOT suitable for this type of finish and may damage it. Before using any cleaning agents to remove graffiti etc. try on a small, inconspicuous area first to avoid causing more unsightly damage.

Repairs

FSC Timber

For light damage, please see section on specific maintenance details above. For instances of heavy damage, the timber item should be replaced. Please order against the part number reference in the reordering section towards the end of this manual.

Galvanised & Polyester Powder Coated Surfaces


For light damage (scratches, chips etc.) repair using touch-up paint to match original colour (available from Factory Furniture Ltd). Paint application should be carried out in accordance with approved methods detailed by the paint manufacturer. Please note that it is advisable to use professional painters to achieve best results when touching up larger areas. Products for respraying larger areas are available from Factory Furniture Ltd.

Heavy Damage

In the event of serious damage to any component, replacements should be ordered from Factory Furniture Ltd. Should further assistance be required (or if the product needs to be disassembled for any reason), please contact Factory Furniture for detailed technical advice.


Installation Instructions

ALL INSTALLATION WORKS TO BE CARRIED OUT BY COMPETENT PERSONNEL - INSTALL AS COMPLETE UNIT

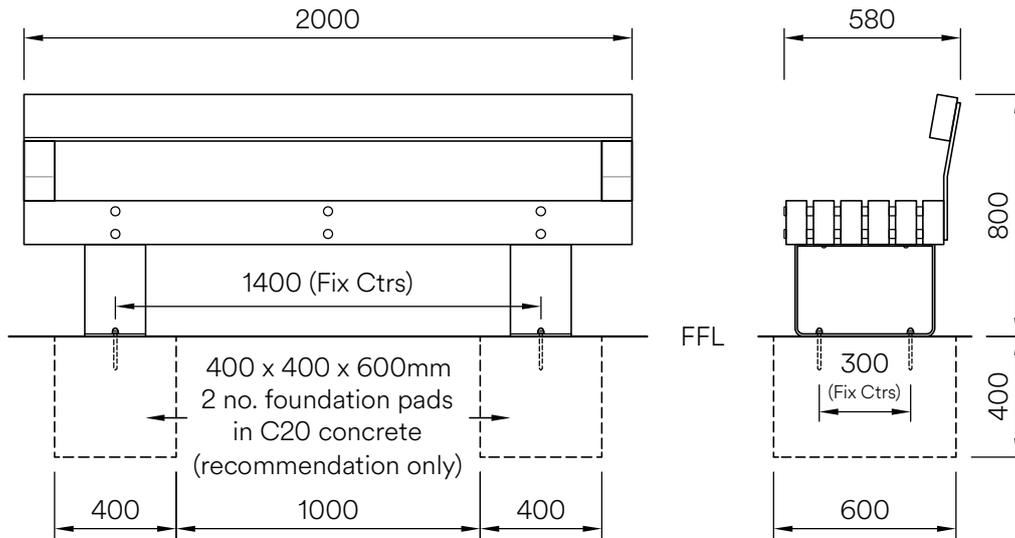


Quay Seat (2m)

1. Install suitable foundation pad (see illustrations) with top face at ground level
2. Position seat in correct position / orientation with base centrally on foundation pad (if necessary use shims to get seat level); then mark hole positions through base
3. Remove seat; drill holes $\text{Ø}12\text{mm}$ x 125mm deep (or as bolt manufacturer's recommendations)
4. Clear debris from holes
5. Screw capnuts onto resin anchor studs (leaving some room for final tightening).
6. Fill the holes to within approximately 35mm from the top with Hilti HY150 resin (or similar).
7. Move seat back into position and drop resin anchor studs with capnuts into the holes - leave for two hours to cure before proceeding (or as per resin manufacturer's instruction)
8. Using a torque wrench, tighten capnuts to 20Nm to fasten down the seat.
9. Check levels.

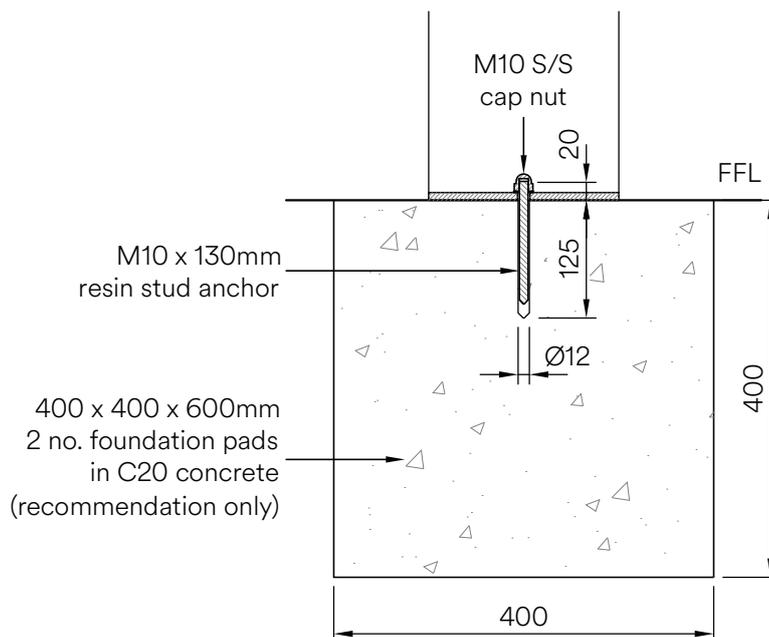

Installation Instructions

ALL INSTALLATION WORKS TO BE CARRIED OUT BY COMPETENT PERSONNEL - INSTALL AS COMPLETE UNIT

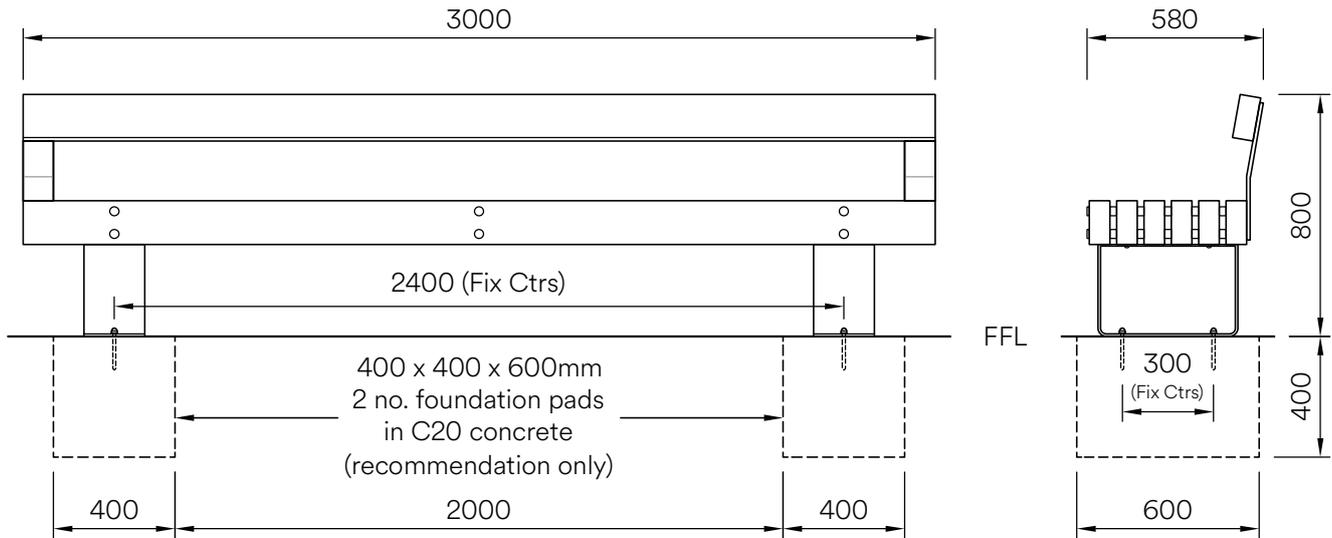

Quay Seat (3m)

1. Install suitable foundation pad (see illustrations) with top face at ground level
2. Position seat in correct position / orientation with base centrally on foundation pad (if necessary use shims to get seat level); then mark hole positions through base
3. Remove seat; drill holes $\text{Ø}12\text{mm}$ x 125mm deep (or as bolt manufacturer's recommendations)
4. Clear debris from holes
5. Screw capnuts onto resin anchor studs (leaving some room for final tightening).
6. Fill the holes to within approximately 35mm from the top with Hilti HY150 resin (or similar).
7. Move seat back into position and drop resin anchor studs with capnuts into the holes - leave for two hours to cure before proceeding (or as per resin manufacturer's instruction)
8. Using a torque wrench, tighten capnuts to 20Nm to fasten down the seat.
9. Check levels.

