


FACTORY FURNITURE



Quay Cycle Stands

OPERATION & MAINTENANCE MANUAL

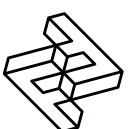

Introduction

Design

Design, shop drawings and development by
Factory Furniture Ltd.

Manufacture

Factory Furniture manufactured components. Products are assembled in Factory workshops, checked and dispatched ready for installation. Replacement products or components thereof should be ordered direct from Factory Furniture Ltd.

Copyright

The design copyright for the product and drawing copyright remains the sole property of Factory Furniture Ltd.

General Specifications

QUAY Cycle Stand A

Metric L 335mm | W 80mm | H 725mm *

Imperial length 1' 1" | width 3" | height 2' 4½" *

* Not incl. +200mm (8") below ground level for sub-surface fix

Approx Weight 13kg

QUAY Cycle Stand B

Metric L 480mm | W 80mm | H 725mm *

Imperial length 1' 7" | width 3" | height 2' 4½" *

* Not incl. +200mm (8") below ground level for sub-surface fix

Approx Weight 14kg

QUAY Bollard

Metric L 140mm | W 100mm | H 740mm *

Imperial length 5½" | width 4" | height 2' 5" *

* Not including +200mm (8") below ground level for sub-surface fix

Approx Weight 16kg

Materials & Finishes

Timber Slat(s)

- Manufactured from FSC® certified timber.
- Slats are profiled and left untreated as standard.
- Fixed to galvanised mild steel frame.



Frame

- Manufactured from mild steel with a hot dip galvanised finish. (Option for polyester powder coated finish available on request (*any RAL colour*)).
- Root fixed 200mm (8") below ground level

General Maintenance

(Recommended Schedule & Guidelines)

Daily/Weekly/Monthly (or as adopted)

Visual checks of timber slat(s) and frame - check all items for superficial or physical damage.

Three Monthly

Clean all items as detailed below check all fixings are seated correctly; inspect timber for serious damage and splinters.

Six Monthly

Secure all fixings; full clean as detailed below; check that product is firmly secured to the ground


Specific Maintenance Details

FSC Timber

Clean with a stiff brush once per year, especially in more exposed locations, in order to prevent a verdigris type build up on the timber surface. Ideally this should be completed in early spring. During the cleaning stage, all exposed timber surfaces should be inspected for splits and splinters. Any splinters and graffiti should be removed and the surface sanded with 100 grit sandpaper in order to remove any uneven / sharp edges or surfaces.

Galvanised & Polyester Powder Coated Surfaces

For general cleaning using a damp cloth and warm soapy water only. Scourers and abrasive cleaners are NOT suitable for this type of finish and may damage it. Before using any cleaning agents to remove graffiti etc. try on a small, inconspicuous area first to avoid causing more unsightly damage.

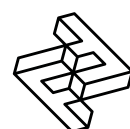

Repairs

FSC Timber

For light damage, please see section on specific maintenance details above. For instances of heavy damage, the timber item should be replaced. Please order against the part number reference in the reordering section towards the end of this manual.

Galvanised Surfaces


For light damage to hot dipped galvanised finishes repair using a high performance cold galvanising zinc spray (70% zinc or above). Spray application should be carried out in accordance with approved methods detailed by the product manufacturer. Please note that it is advisable to use professional painters to achieve best results when touching up larger areas.



Polyester Powder Coated Surfaces

For light damage (scratches, chips etc.) repair using touch-up paint to match original colour (available from Factory Furniture Ltd). Paint application should be carried out in accordance with approved methods detailed by the paint manufacturer. Please note that it is advisable to use professional painters to achieve best results when touching up larger areas. Products for respraying larger areas are available from Factory Furniture Ltd.


Heavy Damage

In the event of serious damage to any component, replacements should be ordered from Factory Furniture Ltd. In this event (or if the product needs to be disassembled for any reason), please contact Factory Furniture for detailed technical advice.

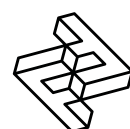

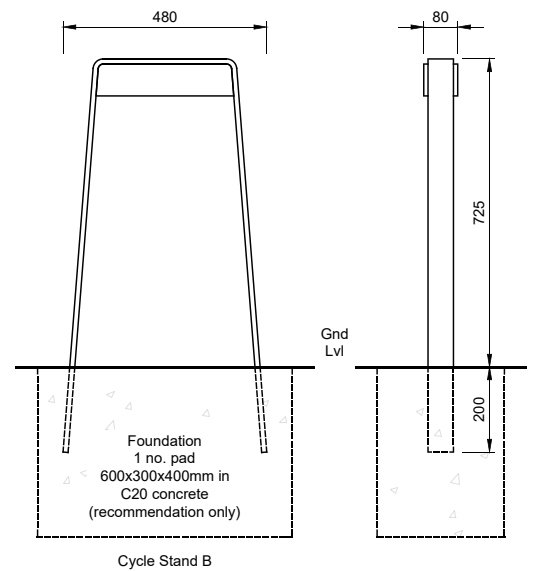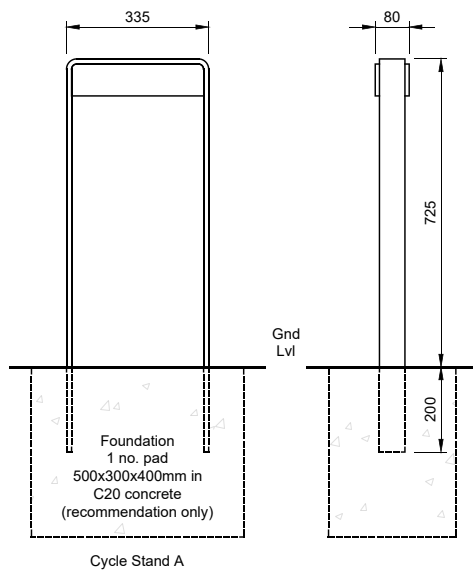

Bike Stands (*Sub-surface Fix Only*)

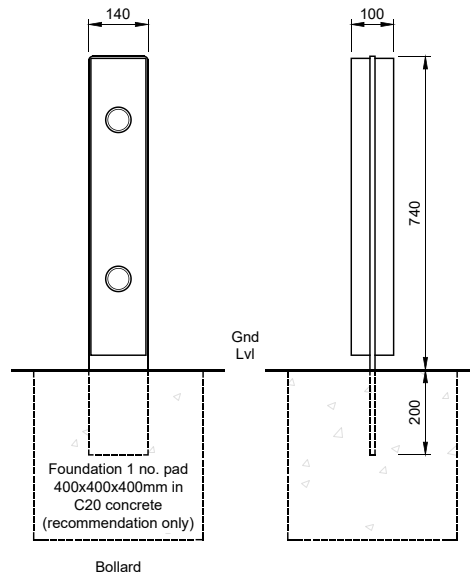

Bollard (*Sub-surface Fix Only*)

Installation Instructions

All installation works to be carried out by competent personnel - install as complete unit.

Bike Stands / Bollard (sub-surface fix only)

1. Install suitable foundation pad (see illustration) with top face at ground level
2. As soon as possible after pouring concrete for pad, position bike stand / bollard in correct orientation centrally in foundation pad. Maintain bike stand / bollard at correct height (200mm below ground) and vertical whilst concrete sets (at least 24 hours).

5 Pioneer Road, Faringdon,
Oxfordshire SN7 7BU
+44 (0)1367 242731
hello@factoryfurniture.co.uk

